




5165-C Commercial Circle Concord CA 94520 800-400-2259

### Model LT Pull Cable- Pneumatic Operation and Set Up

Pull cable receptacle.  
Rotate pull cable head as  
required. See Model LT  
instructions

Pneumatic activation line  
to extinguisher #2

Dedicated line – do not “T”  
off another line

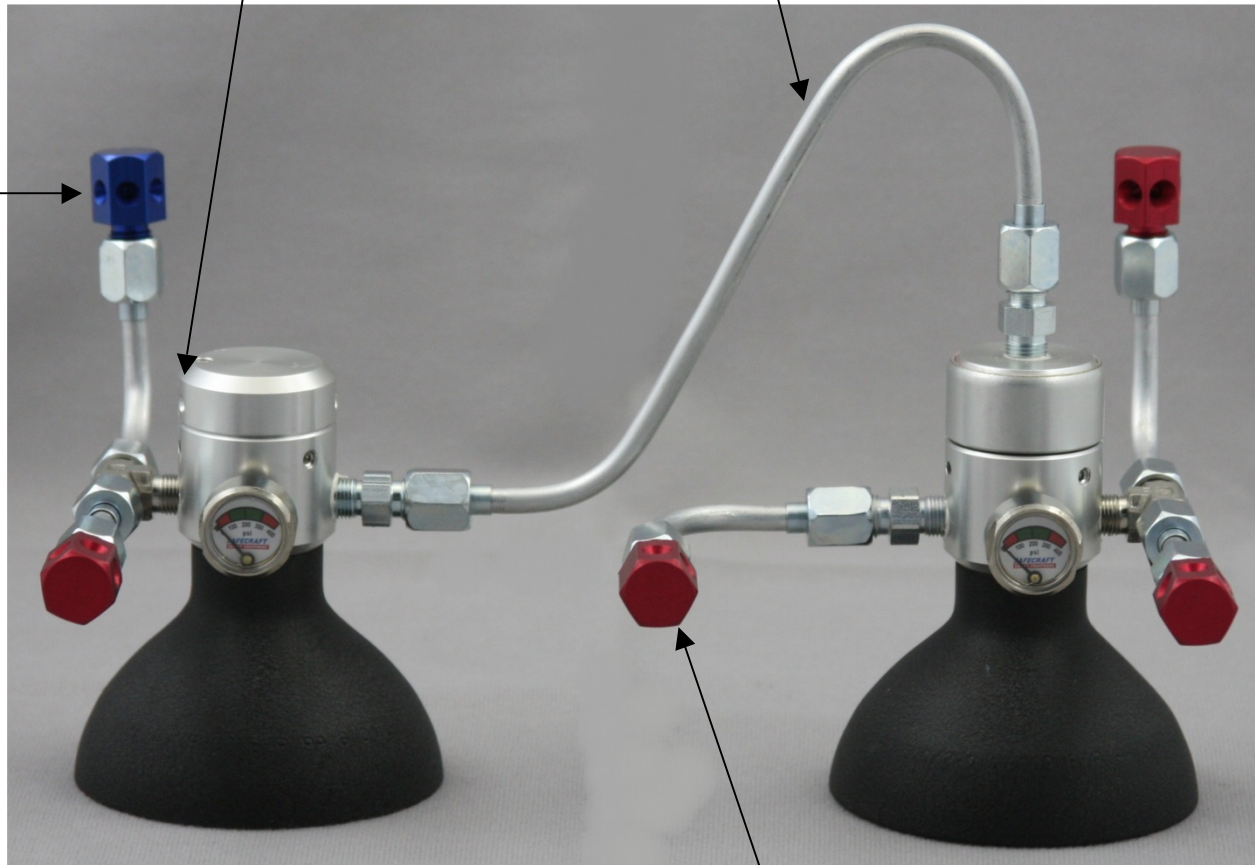

Blue Nozzle – Driver. Run blue nozzle  
to drivers compartment. Only 1 blue  
nozzle is needed. Run this nozzle off of  
pull cable extinguisher

Red Nozzles – engine. Run 4 red  
nozzles to engine compartment