

# **SAFECRAFT**

## **SAFETY EQUIPMENT**

### **Model LT**

### **Remove and Replace Discharge Head**


The following instructions will help you remove and replace the Model LT head

**INSURE THAT THE SAFETY PIN IS INSTALLED IN THE HEAD OR PUSH KNOB SHAFT PRIOR TO BEGINNING**


- 1) Remove the Model LT activating head from the extinguisher by :  
(Refer to picture A for Push Knob unit and picture B for Pull Cable unit).
  - a) Using a 1/8 inch punch, tap out the roll pin on the discharge head. It is located to upper left of the pressure gauge. **Drive it out from the gauge side of the head. Keep the pin.**
  - b) Loosen set screw # 1 – almost all the way out - on the side on the discharge head.
  - c) Twist and pull the top off of the discharge head.
  
- 2) Twist and push the new activation head top onto the bottle head, it will snap into place on the discharge head. Refer to picture B.  
  
Note: You may have to lubricate the “O” ring on the discharge head. Any general purpose grease will do.
  
- 3) Tap in the roll from the gauge side of the head – otherwise the head may loosen on the cylinder and cause a leak..
  
- 4) Attach the lanyard that is on the safety pin around the pressure gauge and snap it closed.
  
- 5) Install the extinguisher in the vehicle.
  
- 6) Install the actuation cable. You can loosen the set screw (#1) on the side of the head to rotate the pull cable activation head. Tighten it after you have located the correct position. Snug down set screw # 2 after you have installed the pull cable outer sheath.

**Remove the pull pin only after installing the pull cable.**

**The pin must be removed for the extinguisher to operate.**

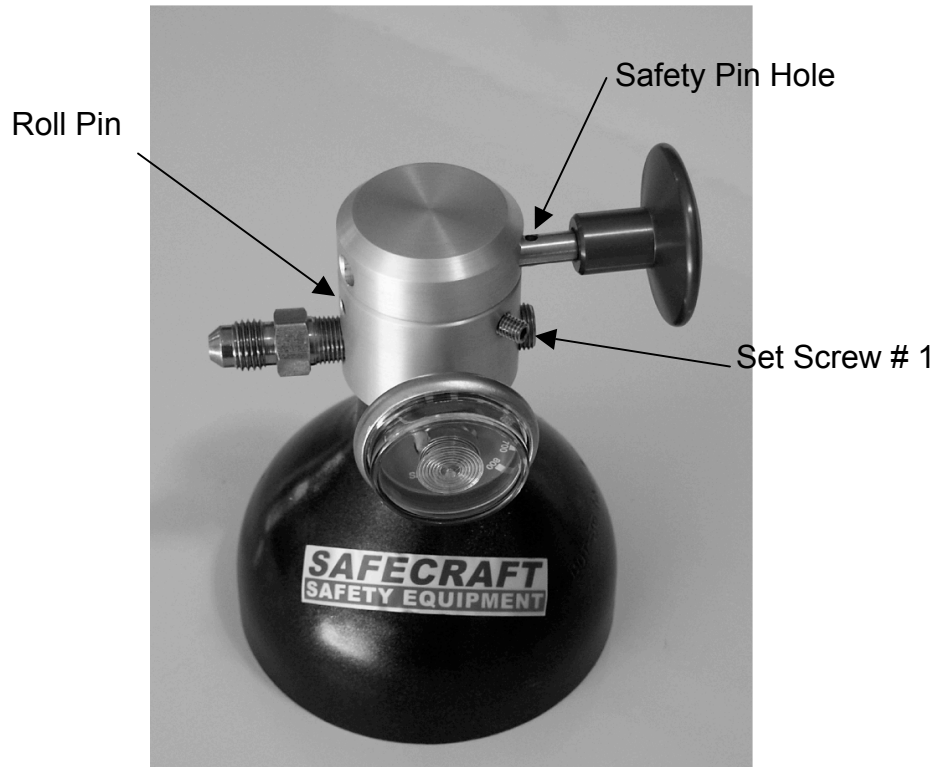

Picture A

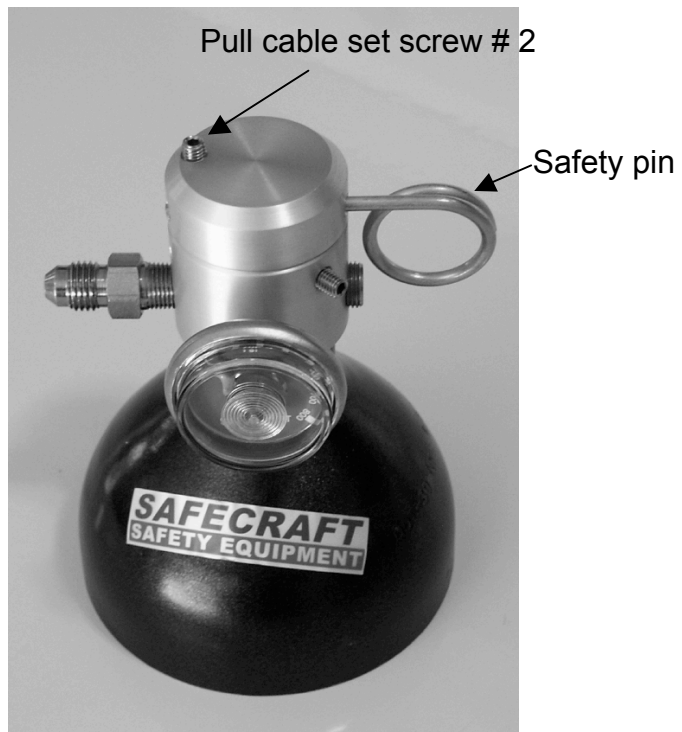

Picture B